




 


1. Diagram and Instructions

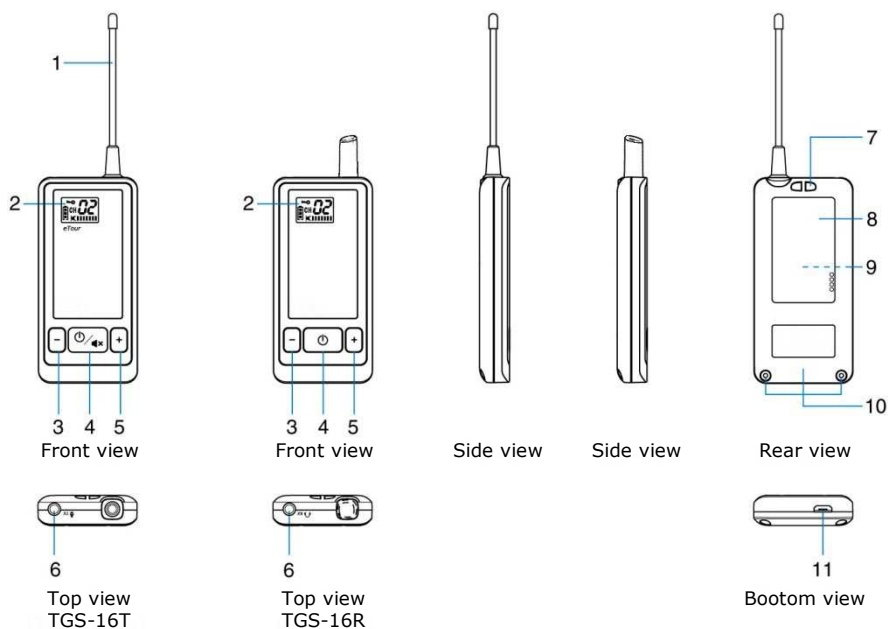



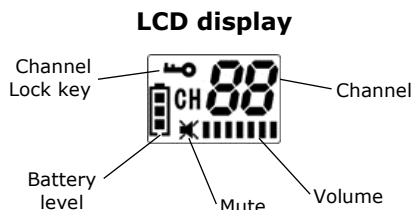


- 1 - Antenna (for TGS-16T only)
- 2 - LCD display
- 3 - Down button for channel and aolume adjustment
- 4 - On / Off / Mutte / Set Button
- 5 - Up button for channel and volume adjustment
- 6 - Microphone input for Transmitter Earphone output for Receiver
- 7 - Lanyard connection point
- 8 - Label area
- 9 - Battery compartment and built-in Li-Po battery
- 10 - Lid of battery compartment
- 11 - Micro-USB charging port



2. LCD Display Illustration

	TGS-16T	TGS-16R
	Channel Lock	
	Channel change	
	Mute/Mic disconnect	Mute
	level 4 microphone volume	level 4 microphone volume


 
 
 
	TGS-16T	TGS-16R
	-	No signal receiver
	100% battery remaining	
	70% battery remaining	
	30% battery remaining	
	10% battery remaining	

3. Operating Instructions

 
 

 





3.1. Microphone and Earphone Connection

- Connect the microphone/headset to the 3.5mm socket on the transmitter and the earphones to the 3.5mm socket on the receiver. Make sure the connectors are properly inserted in place

3.2. Power On and Off

- Press and hold the power button  /  for 2 seconds to turn on the system. The LCD display will illuminate and receive the channel number used last time 10 indicate Power on successfully
- Press and hold the power button  /  for 2 seconds. The LCD display will disappear to indicate Power off completely
- Energy saving-Receiver will automatically power off if no signal is received after about 20min

3.3. How to select a channel

- The channel is preset to **CH 01**. If you wish to select a different channel, press  and  buttons simultaneously for 2 seconds. The  sign starts flashing and  icon is removed to indicate channel escape from lock mode. Press  or  button to select your desired channel. Press button  /  briefly to confirm the selected channel or wait for approximately 5 seconds to automatically store and lock the selected channel **CH** will stop flashing and LCD displays  icon. System now returns to lock mode.


Note:

- Make sure that the transmitter and receiver(s) operate on the same channel. The receiver display will keep flashing when no transmission signal is being received
- System will retrieve channel number used previously



3.4. Transmitter Using LM-15 Lapel microphone

- The Aux input port on the LM-15 microphone accepts external line-level audio source, for example CD/MP3 player. An ideal tool for you to play audio source while making a speech

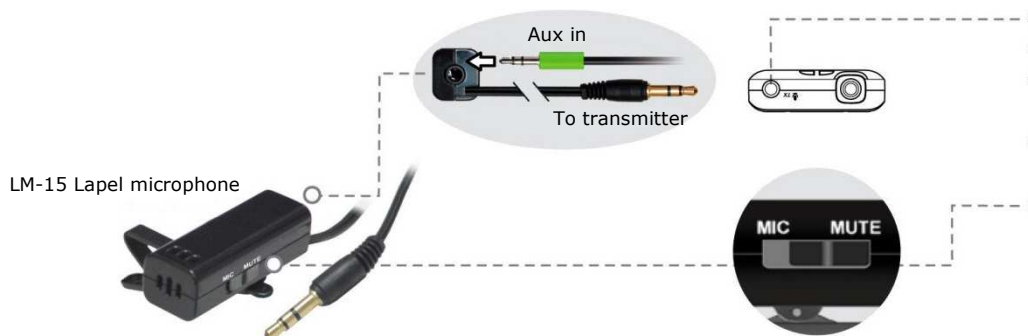

- Connect LM-15 microphone to the 3.5mm socket on the transmitter
- Transmitter volume is preset at level **◀ █ █ █ █**
- Press **◀** or **▶** button to decrease or increase the volume level. There are 4 adjustment levels from **◀ █ █ █ █** to **◀ █ █ █ █**.
- Press mute button **⏏** briefly to mute the transmitter, press the same button **⏏** once again to recover
- LM-15 features a microphone-mute switch; Switch to „mute“ when you like to play the aux input source alone or to have private conversation

3.5. Transmitter Using microphone other than LM-15

The 3.5mm socket on the transmitter accepts mic and line level input source

The default input is set to microphone level


 

- Connect microphone to the 3.5mm socket on the transmitter
- Transmitter volume is preset at level 4 **◀ █ █ █ █**
- Press **◀** or **▶** button to decrease or increase the volume level. There are 4 adjustable levels from **◀ █ █ █ █** to **◀ █ █ █ █**
- Press mute button briefly to mute the transmitter. Press the same button once again to Recover.

3.6. Receiver

- Receiver volume is preset at level 4 **◀ █ █ █ █**
- In normal state **🔑** be displayed, press **◀** or **▶** button to decrease or increase the volume level. There are 8 adjustable levels from **✖** to **◀ █ █ █ █**
- The LCD display **✖** indicates no volume and in mute mode



3.7. Battery Autonomy and Charging

- When battery icon is displayed at full autonomy , the battery contains sufficient power
- When the battery icon is displayed as empty and flashing  this indicates low battery and only 10% battery remaining. Recharge the battery immediately via USB certified traveling charger (optional accessories). 6 hours to reach full charge and provide approx. 16 hours of continuous operation for receiver and 11 hours of continuous operation for transmitter
- While charging the battery icon displays on LCD  back and forth

Note:

- The transmitter or receiver will shut down automatically when charging is taking place. If you want to use the system while it's charging, simply press the power button again to turn the system back on Q&A

Q1  Sign is displayed on Transmitter

Ans Check if the transmitter volume is muted or the microphone connection is not properly attached

Q2 The content on the LCD display of my receiver is flashing

Ans This indicates that no transmission signal is being received. Make sure your transmitter is powered on. Both transmitter and receiver are operated on the same channel and same frequency

