





Safety Precautions:

- Make sure to read the "User Manual" for safety precautions before installing unit or accessories
- Please make sure the vehicle is well parked at a safe place and the engine and the power of the vehicle are switched off
- Avoid installation outdoors under a thunder/raining situation
- We demonstrate the situation when the passenger's seat is at the right side of the driver's seat. For the opposite situation, please change the directions.
- Ø Objects in monitor are closer than they are appear
- Rear Camera is not a safety device. Safe driving is the driver`s responsibility in any and all circumstance

Color CCD Camera

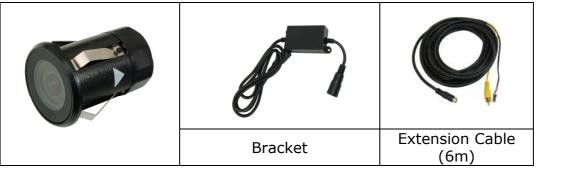

Wiring

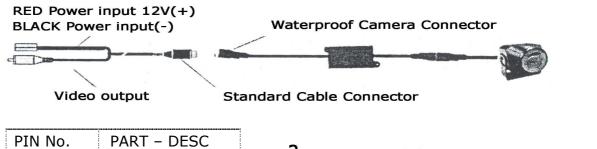

PIN NO.	PART – DESC
1	Video Output
2	Power 12V DC
3	GND
4	



Date: 17/02/2010

Molpir s.r.o. sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1219, Fax: 00421 2 4319 1220, e-mail: obchod@molpir.com, www.molpir.com, www.shop.molpir.com


IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/1100, register: OS Trnava, odd: Sro, vlož.: 1045/T

MOLPIR GROUP CZ a.s., Technologická 838/14, 779 00 Olomouc, Holice, Česká republika, Tel.: 00420 585 315 017, Fax: 00420 585 315 021, e-mail: molpir_o@molpir.cz, www.molpir.cz MOLPIR GROUP CZ a.s., Business centrum Klamovka, Plzeňská 155/113, 150 00 Praha 5 – Košíře, Tel.: 00420 724 606 000, e-mail: jsvoboda@molpir.cz, www.molpir.cz IČO: 25828843, DIČ: CZ25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094





Installation

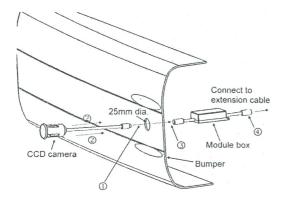

- Drill a hole (Ø25mm) at a proper place on the bumper. Please drill the hole above the steel structure inside the bumper
- To bush the camera into drilled hole on the bumper. Please turn the <u>white mark</u> on the camera to top
- Connect the 12pin mini DIN to integrate the camera and the module box
- Connect the 6pin mini DIN to CCD camera extension cable

Important:

*The rear view camera will be used when the car is in reverse

- *Make hole on vehicle body if necessary just large enought for the Camera Extension Cable Connector to pass throught while installation.
- *Please take special care to the wire positioning while install the rear view system in order to avoid wiring damage



Date: 17/02/2010

Molpir s.r.o. sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1219, Fax: 00421 2 4319 1220, e-mail: obchod@molpir.com, www.molpir.com, www.shop.molpir.com

IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/1100, register: OS Trnava, odd: Sro, vlož.: 1045/T

MOLPIR GROUP CZ a.s., Technologická 838/14, 779 00 Olomouc, Holice, Česká republika, Tel.: 00420 585 315 017, Fax: 00420 585 315 021, e-mail: molpir_o@molpir.cz, www.molpir.cz MOLPIR GROUP CZ a.s., Business centrum Klamovka, Plzeňská 155/113, 150 00 Praha 5 – Košíře, Tel.: 00420 724 606 000, e-mail: jsvoboda@molpir.cz, www.molpir.cz IČO: 25828843, DIČ: CZ25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094