
Make: Skoda Model: Superb Year: 02- Type: With el. window

KM-04-03-8095

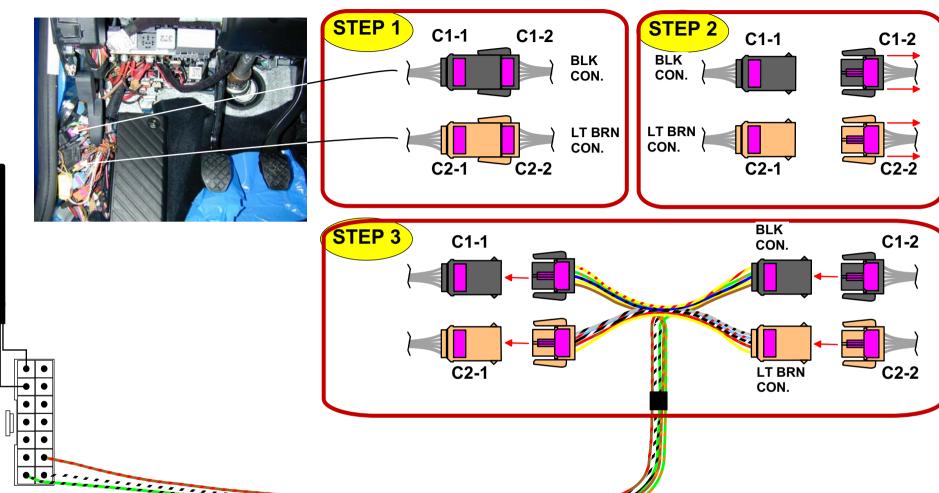

YOU NEED:


- Central unit rev: C >

• •

> Attention! This installation diagram must only be used as a guideline for the installation. Equipment delivered with the car varies considerably from model to model and from market to market. Before starting the installation, be sure to check carefully the original diagram from the car manufacturer. DEFA A.S is not liable to compensate for possible damages that may occur due to faulty or insufficient installation manuals

Date: 03. 04. 26.

Rev:A Page: 1 of 4. DOC. NO: 8095-CAN-X(M)G-Skoda-Superb-el.window-02>

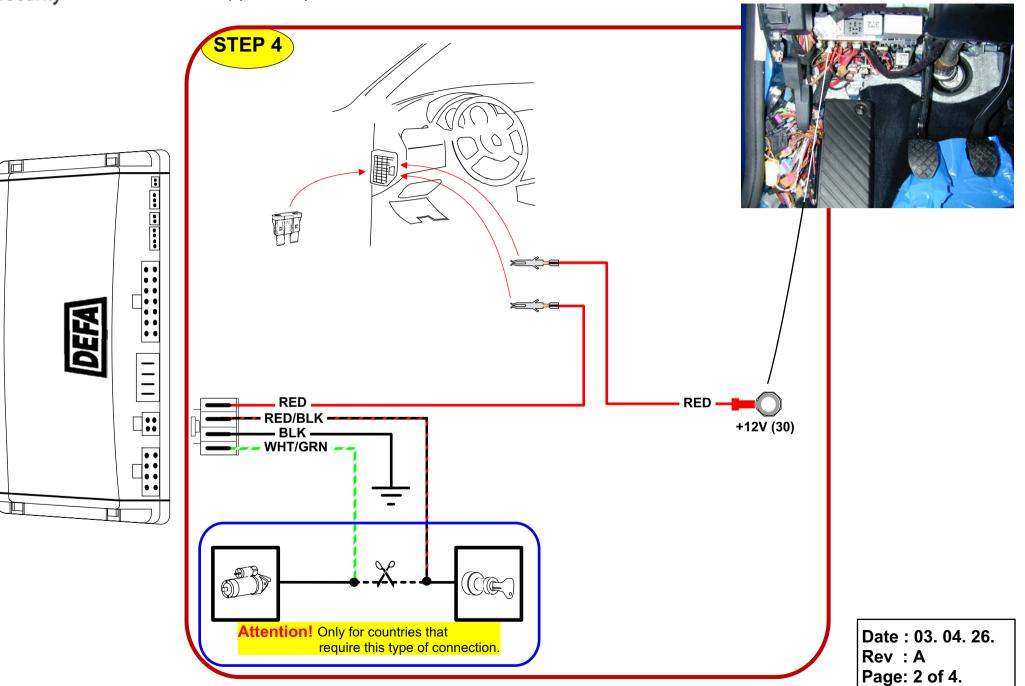


AutoSecurity

Make: Skoda Model: Superb Year: 02- Type: With el. window

DOC. NO: 8095-CAN-X(M)G-Skoda-Superb-el.window-02>

KM-04-03-8095

Attention! Only when using the DEFA remote control the connections on this page are needed.

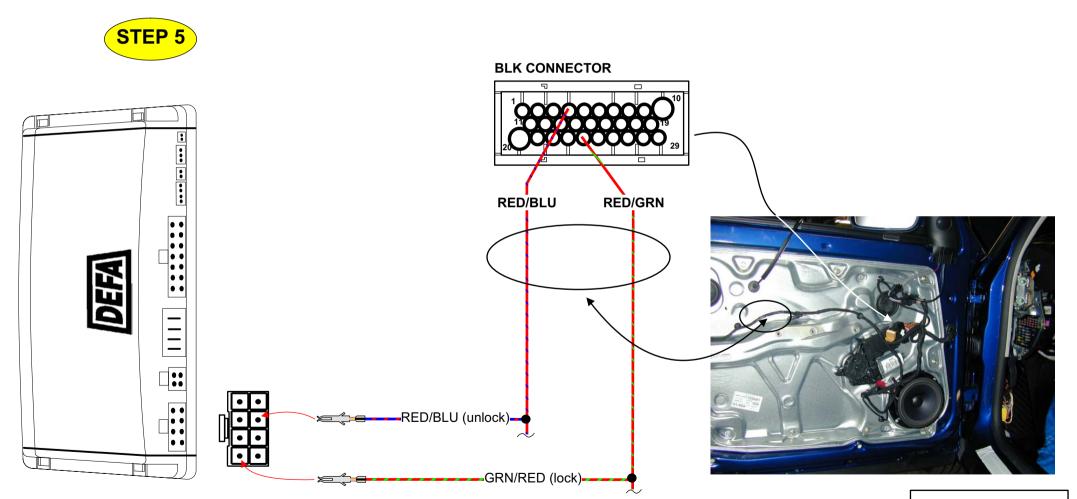


Date: 03. 04. 26.

Rev:A Page: 3 of 4.

Make: Skoda Model: Superb Year: 02- Type: With el. window

CAN-X(M)G
DOC. NO: 8095-CAN-X(M)G-Skoda-Superb-el.window-02>

KM-04-03-8095

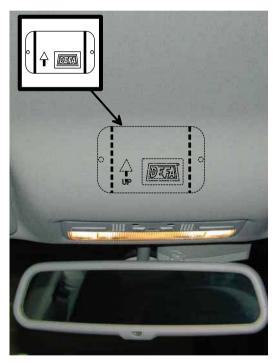

AutoSecurity







Date: 03. 04. 26.

Rev : A Page: 4 of 4.