

Installation of the monitor Funtoro into the seat Brusa 300/500



Date: 22.01.2013

Page 1 / 12

MOLPIR s.r.o., sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 431 912 18, 431 912 19, Fax: 00421 2 431 912 20
e-mail: obchod@molpir.sk, www.molpir.sk

IČ: 31431372, IČpD: SK 20203915460; Tatra banka Bratislava, č. ú.: 2628020575/11 00; Register: OS Trnava, odd. Sro, vložka: 1045/T

MOLPIR GROUP CZ a.s., Technologická 838/14, 779 00 Olomouc - Holice, Česká republika, Tel.: 00420 585 315 017, 585 315 018, Fax: 00420 585 315 021, e-mail: pcejka@molpir.cz, www.molpir.cz


MOLPIR GROUP CZ a.s., Na Dědinách 8, 141 00 Praha 41, Česká republika, Tel.: 00420 241 482 233, 241 482 244, Fax: 00420 241 482 255, e-mail: molpir@molpir.cz, www.molpir.cz

IČ: 25828843, DIČ: CZ25828843; ČSOB Olomouc, č. ú.: 377913723/0300; Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

ISO 9001

NM_FMS037-M01BR_002_22012013_EN

Components for installation needed:

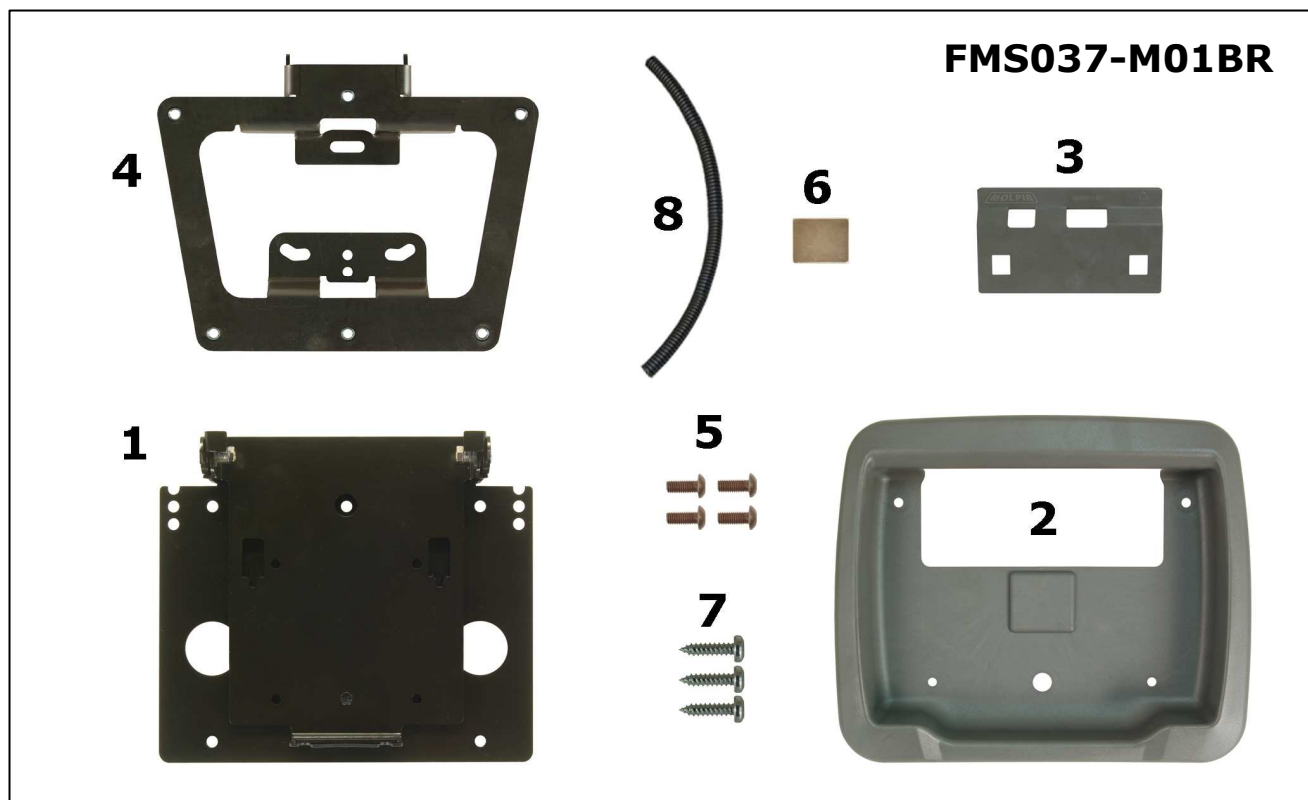

Poz.1	Názov	Kód	ks/m
1	Držiak monitora FMS5723 + pánty - výklopný 0°-90°	FMS5723-HH-XX	1
1*	Držiak monitora FMS5723 + pánty - výklopný 0°-60°	FMS5723-HH-60-01	1
2	Plast sedačky s otvorom pre monitor FMS5723; Brusa Class	068962-RAL8019	1
3	Kryt káblov monitora MOD systému FMS5723HH-XX - plast	068961-RAL8019	1
4	Držiak monitora pre sedačku Brusa Class 300/500	0810332-M	1
5	Skrutka M5x12mm s polgulatou hlavou - Torx - čierna	105BN6404M5x12C	4
6	Magnet - 25mmx20mmx3,5mm N38 pre monitor Funtoro	NH137	1
7	Skrutka samorezná 4,8x19mm Torx	104BN132744,8x19	3
8	Chránička plastová D11,6mm/8,5mm rozoberateľná	1926658	0,5

*variant súpravy s pántom s uhlom vyklopenia 60°



Date: 22.01.2013

Page 2 / 12

MOLPIR s.r.o., sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 431 912 18, 431 912 19, Fax: 00421 2 431 912 20

e-mail: obchod@molpir.sk, www.molpir.sk

IČ: 31431372, IČpD: SK 20203915460; Tatra banka Bratislava, č. ú.: 2628020575/11 00; Register: OS Trnava, odd. Sro, vložka: 1045/T

MOLPIR GROUP CZ a.s., Technologická 838/14, 779 00 Olomouc - Holice, Česká republika, Tel.: 00420 585 315 017, 585 315 018, Fax: 00420 585 315 021, e-mail: pcejka@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Na Dědinách 8, 141 00 Praha 41, Česká republika, Tel.: 00420 241 482 233, 241 482 244, Fax: 00420 241 482 255, e-mail: molpir@molpir.cz, www.molpir.cz

IČ: 25828843, DIČ: CZ25828843; ČSOB Olomouc, č. ú.: 377913723/0300; Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

ISO 9001

NM_FMS037-M01BR_002_22012013_EN

Components needed for monitor installation – additional:



Pos.	Component	Code	pc
9	Monitor 7"	FMS-MM5723	1
10	Installation kit of screws	FMS037-5723-01	1
11	Power supply cabling 1,6m	FMS-CA04-01600	1

Installation template:



Ordering number: 068959-M

Assembly jig:



Ordering number: 0810366-M



Date: 22.01.2013

Page 3 / 12

MOLPIR s.r.o., sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 431 912 18, 431 912 19, Fax: 00421 2 431 912 20

e-mail: obchod@molpir.sk, www.molpir.sk

IČ: 31431372, IČpD: SK 20203915460; Tatra banka Bratislava, č. ú.: 2628020575/11 00; Register: OS Trnava, odd. Sro, vložka: 1045/T

MOLPIR GROUP CZ a.s., Technologická 838/14, 779 00 Olomouc – Holice, Česká republika, Tel.: 00420 585 315 017, 585 315 018, Fax: 00420 585 315 021, e-mail: pcejka@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Na Dědinách 8, 141 00 Praha 41, Česká republika, Tel.: 00420 241 482 233, 241 482 244, Fax: 00420 241 482 255, e-mail: molpir@molpir.cz, www.molpir.cz

IČ: 25828843, DIČ: CZ25828843; ČSOB Olomouc, č. ú.: 377913723/0300; Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094



Figure N°1

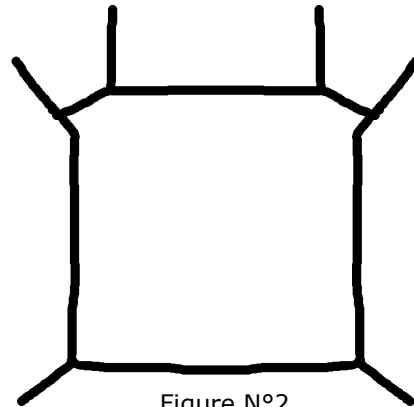


Figure N°2

- 1 - From rear side of the seat cut from the upholstery a piece in shape, as is shown on figures N°1 and N°2. That means, all cuts will begin in corners of the hole for the monitor, apart the upper one, which will be leaded from up to down.



Figure N°3

- 2 - If necessarily, clean the tube for the cabling from contamination after the seat installation, in order to avoid any problems by further installation of monitor cabling



Figure N°4



Figure N°5

- 3 - From the side of monitor hole lead downwards, cross the protection in the seat, monitor cabling pos.11 following figure N°4 so, that it leads trough the whole seat backrest and comes out in the lower part of the seat. Cut 40cm from the protection 1926658 pos.5 and insert the cabling into the protection (Figure N°5)





Figure N°6



Figure N°7

- 4 - Rest of the cabling 1926658 - 30cm (pos.8) put on the monitor cabling following Figure N°6 and then push-in few millimeters into the hole in the seat, following Figure N°7



Figure N°8

- 5 - Adjust the appropriate length of the cabling for the monitor: With one hand hold cabling in the hole corner and the ending of the cabling should be above the opposite upper corner of the seat handle, Figure N°8



Figure N°9



Figure N°10



Assembly jig
0810366-M

- 6 - Into the monitor hole insert monitor holder pos.4 following figure N°9 and push it upward manually (or assembly jig 0810366-M), following figure N°10 so, that hooks on the back of the holder fit behind the steel frame in the seat.





Figure N°11

7 - Because of further installation, place the cabling behind the monitor holder, following figure N°11



Template - 068959-M



Figure N°12

8 - On the hole put the template for drilling of screw holes, figure N°12



Figure N°13

9 - With 4 screws 105BN6404M5x12C (pos.5) tighten the template softly





Figure N°14

10 - Centre the template with the screwdriver and screws 105BN6404M5x12C (pos.5) tighten fully, for its fixation.



Figure N°15

11 - Trough two holes in the template, following figure N°15, with elect. screwdriver screw down screws 104BN132744,8x19 (pos.7)



Figure N°16

12 - Demount the template by unscrewing four screws, figure N°16



Date: 22.01.2013

Page 7 / 12

MOLPIR s.r.o., sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 431 912 18, 431 912 19, Fax: 00421 2 431 912 20
e-mail: obchod@molpir.sk, www.molpir.sk

IČ: 31431372, IČpD: SK 20203915460; Tatra banka Bratislava, č. ú.: 2628020575/11 00; Register: OS Trnava, odd. Sro, vložka: 1045/T

MOLPIR GROUP CZ a.s., Technologická 838/14, 779 00 Olomouc - Holice, Česká republika, Tel.: 00420 585 315 017, 585 315 018, Fax: 00420 585 315 021, e-mail: pcejka@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Na Dědinách 8, 141 00 Praha 41, Česká republika, Tel.: 00420 241 482 233, 241 482 244, Fax: 00420 241 482 255, e-mail: molpir@molpir.cz, www.molpir.cz

IČ: 25828843, DIČ: CZ25828843; ČSOB Olomouc, č. ú.: 377913723/0300; Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

ISO 9001

NM_FMS037-M01BR_002_22012013_EN



Figure N°17



Figure N°18

- 13 - In place where is the cable entering into the seat, attach the cable with the tightening tape to the monitor holder, following figure N°17 and N°18 so, that the tape-lock is on the side of the holder and do not embarrass the further installation



Figure N°19

- 14 - With two screws from the monitor kit M5x10mm pos.10 fix softly monitor hinge (pos.1) trough the middle upper and lower hole (figure N°19)



Figure N°20

- 15 - On the hinge put magnet (pos.6) and center it between four holes on the hinge, following figure N°20





Figure N°21

16 - Insert and center monitor frame (pos.2), according hinge holes, following figure N°21



Figure N°22

17 - Screw down the frame with four screws 105BN6404M5x12C (pos.5) following figure N°22



Figure N°23

18 - Finish point 15 and screws M5x10mm tighten completely (figure N°23)





Figure N°24

19 - Trough the bigger hole in the cable protection 068961-RAL8019 (pos.3) lead the monitor cable following figure N°24



Figure N°25

20 - From the rear side of the monitor (pos.9) insert the connector with the cabling, following figure N°25 till it makes „click” sound and with gently pulling check, that the connector is secured in the monitor



Figure N°26

21 - Insert the cabling into the groove in the monitor, following figure N°26





Figure N°27



Figure N°28

22 - Take pin on the cable protector at the hole on the rear monitor side (N°27) and push it to the monitor (figure N°28)



Figure N°29



Figure N°30

23 - Push the monitor to top of the frame and the upper side push to the seat (figure N°29). When are arrestments in the upper rear side of the monitor inserted behind the metal sheet of the holder, push the monitor downwards (figure N°30).



Figure N°31

24 - Tip up the monitor and check, if both plastic pins on the rear side of the monitor sink into the grooves in the hinge, figure N°31.





Figure N°32

25 - Fix the monitor with two screws M2x5,5mm from the monitor kit (pos.10)



Figure N°33

26 - Close the monitor – installation of the monitor is finished



Date: 22.01.2013

Page 12 / 12

MOLPIR s.r.o., sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 431 912 18, 431 912 19, Fax: 00421 2 431 912 20
e-mail: obchod@molpir.sk, www.molpir.sk

IČ: 31431372, IČpD: SK 20203915460; Tatra banka Bratislava, č. ú.: 2628020575/11 00; Register: OS Trnava, odd. Sra, vložka: 1045/T

MOLPIR GROUP CZ a.s., Technologická 838/14, 779 00 Olomouc - Holice, Česká republika, Tel.: 00420 585 315 017, 585 315 018, Fax: 00420 585 315 021, e-mail: pcejka@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Na Dědinách 8, 141 00 Praha 41, Česká republika, Tel.: 00420 241 482 233, 241 482 244, Fax: 00420 241 482 255, e-mail: molpir@molpir.cz, www.molpir.cz

IČ: 25828843, DIČ: CZ25828843; ČSOB Olomouc, č. ú.: 377913723/0300; Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

ISO 9001

NM_FMS037-M01BR_002_22012013_EN