

## INSTALLATION MANUAL FOR 7" DIGITAL MONITOR WITH 60° TIPPING HOLDER

### 1.

FMS5723



FMS5723-HH-60




Plastic monitor frame

Screws:  
8 ks M5 x 10mm  
2 ks M2 x 6mm



Monitor cable

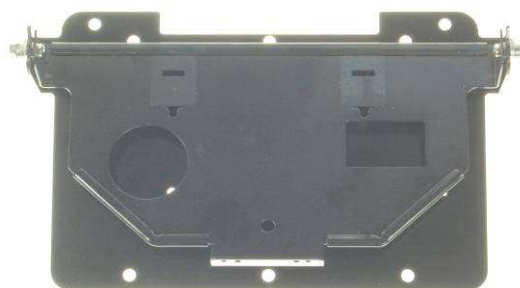

Monitor holder with 60° tipping

### 2. Tools required for installation:



Screwdriver PH2



Screwdriver PH0



Date 07/06/2010

Side 1 / 4

MOLPIR s.r.o., sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1218, 4319 1219, Fax: 00421 2 4319 1220, e-mail: obchod@molpir.sk, www.molpir.sk

IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/11 00, register: OS Trnava, odd: Sro, vlož.: 1045/T

MOLPIR GROUP CZ a.s., Železniční 469/4, 772 00 Olomouc, Česká republika, Tel.: 00420 585 315 017, 585 315 018, Fax: 00420 585 315 021, e-mail: molpir\_o@molpir.cz, www.molpir.cz


MOLPIR GROUP CZ a.s., Na Dědinách 8, 141 00 Praha 41, Česká republika, Tel.: 00420 241 482 233, 241 482 244, Fax: 00420 241 482 255, e-mail: molpir@molpir.cz, www.molpir.cz

IČO: 25828843, DIČ: 379-25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

ISO 9001

### 3. Installation description


Step 1: Put the metal holder into the seat and fix it with 3 screws (M5 x 10 mm) through the holes marked with the red circle

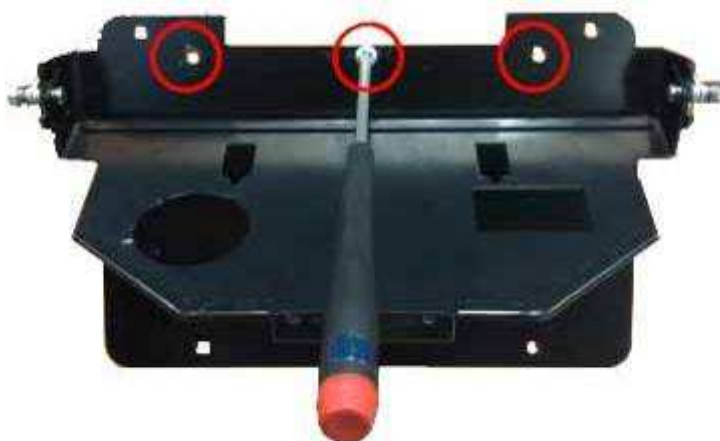

Picture 1 – Fixing of hinge on the seat with screws

Step 2: Installation of the monitor cable:

- 1) Connect POE cable (FMS-CA04-.....) to the monitor
- 2) Put the cable into the chase
- 3) Fix the cable in the chase with the adhesive tape

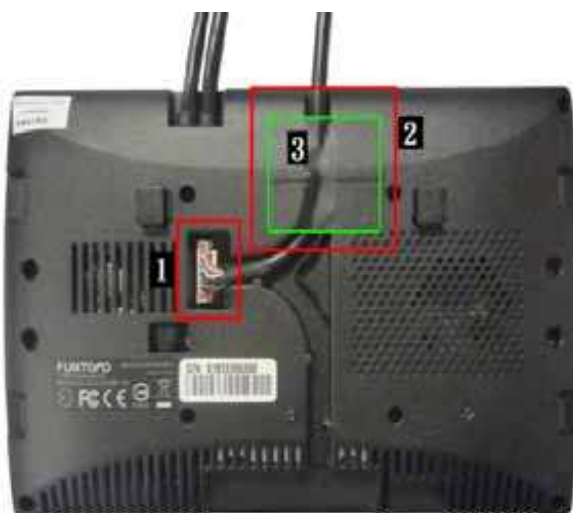

Picture 2 – Monitor cabling



Date 07/06/2010

Side 2 / 4

MOLPIR s.r.o., sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1218, 4319 1219, Fax: 00421 2 4319 1220, e-mail: obchod@molpir.sk, www.molpir.sk

IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/11 00, register: OS Trnava, odd: Sro, vlož.: 1045/T

MOLPIR GROUP CZ a.s., Železniční 469/4, 772 00 Olomouc, Česká republika, Tel.: 00420 585 315 017, 585 315 018, Fax: 00420 585 315 021, e-mail: molpir\_o@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Na Dědinách 8, 141 00 Praha 41, Česká republika, Tel.: 00420 241 482 233, 241 482 244, Fax: 00420 241 482 255, e-mail: molpir@molpir.cz, www.molpir.cz


IČO: 25828843, DIČ: 379-25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

ISO 9001

NM\_FMS5723\_001\_07062010\_EN


### Step 3: Install the monitor on the holder

1) Hang up the monitor on the T-slot of the holder (hinge)

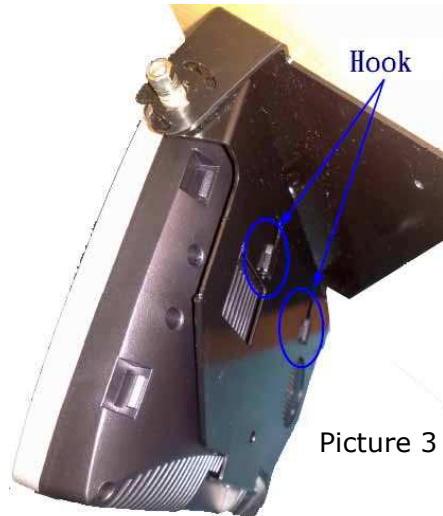

Picture 3 – Suspension of the monitor on the hinge


2) Fix the monitor with 2 screws (M2 x 6mm)

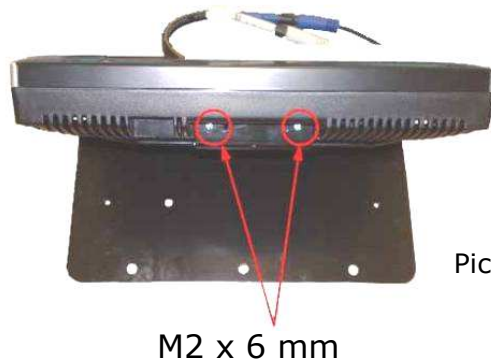

Picture 4 – Fixing of monitor on the hinge

M2 x 6 mm

### Step 4: Connect cables AUX-IN and SPK-OUT if is it necessary

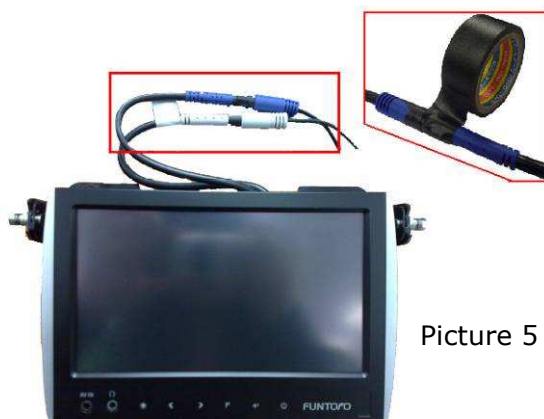

Insulate the joint with insulating tape

Picture 5 – Cables AUX-IN and SPK-OUT



Date 07/06/2010

Side 3 / 4

MOLPIR s.r.o., sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1218, 4319 1219, Fax: 00421 2 4319 1220, e-mail: obchod@molpir.sk, www.molpir.sk

IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/11 00, register: OS Trnava, odd: Sro, vlož.: 1045/T

MOLPIR GROUP CZ a.s., Železniční 469/4, 772 00 Olomouc, Česká republika, Tel.: 00420 585 315 017, 585 315 018, Fax: 00420 585 315 021, e-mail: molpir\_o@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Na Dědinách 8, 141 00 Praha 41, Česká republika, Tel.: 00420 241 482 233, 241 482 244, Fax: 00420 241 482 255, e-mail: molpir@molpir.cz, www.molpir.cz

IČO: 25828843, DIČ: 379-25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

ISO 9001

TI\_FMS5723\_001\_07062010\_EN

## Step 5: Installation of the monitor plastic frame

- 1) Tip up the monitor to 45° ~ 60° angle
- 2) Put the plastic frame on the holder with the monitor on



Picture 6 – Installation of the holder



M5 x 10 mm

Picture 7 – Fixing of holder with screws

## Step 6: Fix the plastic frame with 5 screws (M5 x 10mm)



Date 07/06/2010

Side 4 / 4

MOLPIR s.r.o., sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1218, 4319 1219, Fax: 00421 2 4319 1220, e-mail: obchod@molpir.sk, www.molpir.sk

IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/11 00, register: OS Trnava, odd: Sro, vlož.: 1045/T

MOLPIR GROUP CZ a.s., Železniční 469/4, 772 00 Olomouc, Česká republika, Tel.: 00420 585 315 017, 585 315 018, Fax: 00420 585 315 021, e-mail: molpir\_o@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Na Dědinách 8, 141 00 Praha 41, Česká republika, Tel.: 00420 241 482 233, 241 482 244, Fax: 00420 241 482 255, e-mail: molpir@molpir.cz, www.molpir.cz

IČO: 25828843, DIČ: 379-25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

ISO 9001

TI\_FMS5723\_001\_07062010\_EN